

4.9.4 SECURITY LEVEL

Security Level renders more decoding accuracy giving consideration to barcodes' print quality. Decide the security level for reading EAN-13 barcodes.

Normal



100487

*High




100486

1



Enter Setup


4.10 GS1-128 (EAN-128)

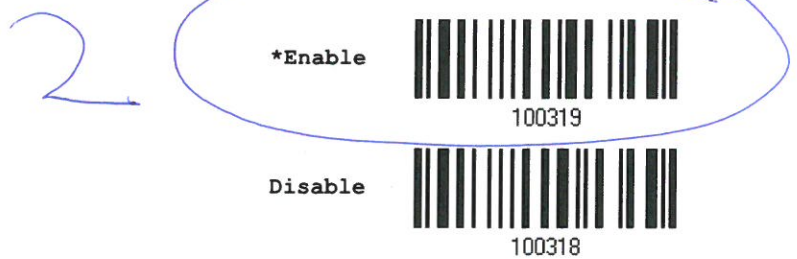

Note: When this setting is disabled, GS1-128 barcodes used to be taken as Code 128. However, starting from firmware version 1.01, GS1-128 barcodes can be decoded only when this setting is enabled.

4.10.1 CODE ID TRANSMISSION

Decide whether to include the Code ID (" FNC1 ") in the data being transmitted.

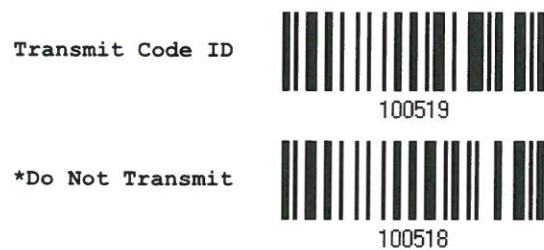

4.10.2 FIELD SEPARATOR (GS CHARACTER)

Decide whether to apply a field separator (to convert the FNC1 control character to human readable character).



- 1) Read the barcode above to enable field separator.
- 2) Read the "Hexadecimal Value" barcode on page 230 for the desired character string.
- 3) Read the "Validate" barcode to complete this setting.

Note: GS1-128 barcodes start with the FNC1 control character to distinguish themselves from other uses of Code 128. FNC1 is also used to separate data fields in the GS1-128 barcodes.

